AHA Diagnostic ECG Electrode Placement

The quality of an ECG is dependent on the preparation and the resistance between the skin and the electrode. To ensure a good quality ECG and minimize the skin/electrode resistance, remember the following points:

- 1.) Ensure that the patient is warm and relaxed
- 2.) Shave electrode area before cleaning
- 3.) Thoroughly clean the area with alcohol
- 4.) Let dry prior to applying electrode

Resting ECG

RA and LA electrodes should be placed on the wrists. RL and LL electrodes should be placed a few inches above the ankle.


Lead Electrode Placement

- V1 Fourth intercostal space at the right border of the sternum
- V2 Fourth intercostal space at the left border of the sternum
- V3 Midway between locations V2 and V4
- V4 At the mid-clavicular line in the fifth intercostal space
- V5 At the anterior axillary line on the same horizontal level as V4
- V6 At the mid-axillary line on the same horizontal level as V4 and V5

For service or technical support, please call (800) 535-6663. For supplies, please contact your authorized Welch Allyn distributor.



Advancing Frontline Care™

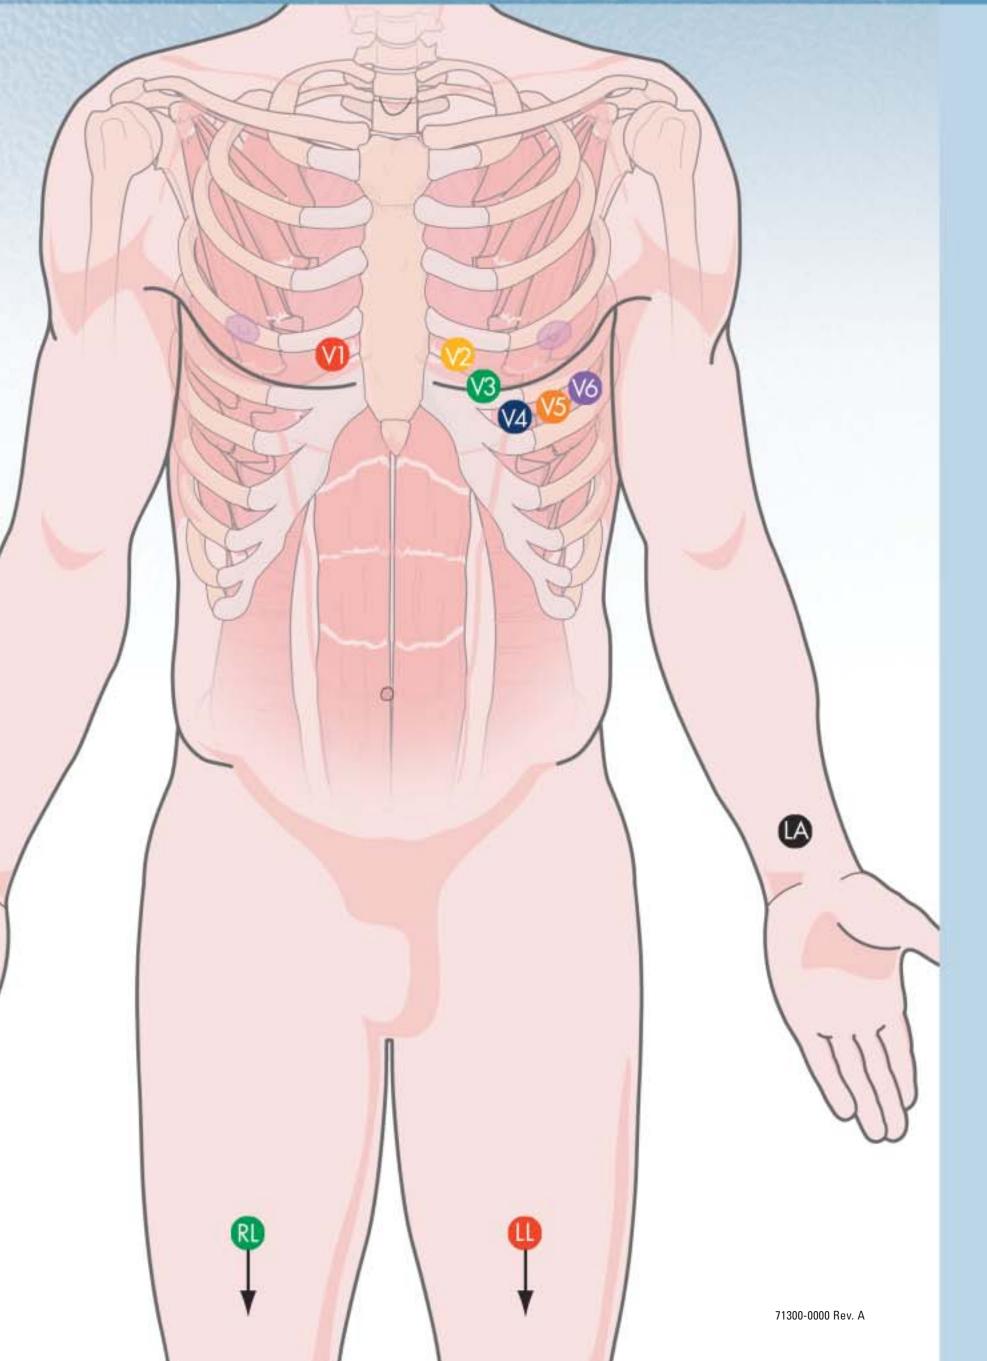

IEC Diagnostic ECG Electrode Placement

The quality of an ECG is dependent on the preparation and the resistance between the skin and the electrode. To ensure a good quality ECG and minimize the skin/electrode resistance, remember the following points:

- 1.) Ensure that the patient is warm and relaxed
- 2.) Shave electrode area before cleaning
- 3.) Thoroughly clean the area with alcohol
- 4.) Let dry prior to applying electrode

Resting ECG

R and L electrodes should be placed on the wrists.

N and F electrodes should be placed a few inches above the ankle.

Lead Electrode Placement

- C1 Fourth intercostal space at the right border of the sternum
- C2 Fourth intercostal space at the left border of the sternum
- C3 Midway between locations C2 and C4
- C4 At the mid-clavicular line in the fifth intercostal space
- C5 At the anterior axillary line on the same horizontal level as C4
- C6 At the mid-axillary line on the same horizontal level as C4 and C5

For service or technical support, please call (800) 535-6663. For supplies, please contact your authorized Welch Allyn distributor.



Advancing Frontline Care™

