

DTC3Z FFP2 NR D

Product Technical Bulletin



Product Information

| Model | Standard | Description | Color | Packing |
|--------------------|--------------------|---------------------------------|---------------------------------|----------------------------|
| DTC3Z FFP2 NR D | EN149:2001+A1:2009 | Particulate Mask Non-Medical | White Fabric Blue head strap | 20 pcs/box 20 boxes/ctn |

Product Features

- ✧ FFP2 NR D, Filters at least 94% of airborne particles. Strongly resistant to oil.
- ✧ Pass Optional Dolomite Clogging Test.
- ✧ Head strap design, fit closer to the face.
- ✧ Adjustable nose clip for better fit.
- ✧ Ultrasonic welding technology, glue-free and odorless.

Product Materials

- ✧ Latex free
- ✧ Static-electro treated meltblown filtration material
- ✧ Synthetic Rubber straps
- ✧ Plastic covered iron nose bridge
- ✧ Non-toxic and odorless marking

Standard Information

| Property | Typical Values |
|----------------------------------|------------------------------|
| CE 2849 & UKCA 0194 | |
| EN149:2001+A1:2009 certification | |
| Filtration at 95 l/min | >94% of 0.3 micron particles |

Container Loading QTY


◇ MEAS: 49.5 x 46 x 26 cm (0.059202cbm)

| 20' GP /28 cbm | 40' GP/ 58 cbm | 40' HQ / 68 cbm | 45'HQ / 72cbm |
|--------------------------|--------------------------|---------------------------|---------------------------|
| 470ctns (188,000 pcs) | 975ctns (390,000 pcs) | 1145ctns (458,000 pcs) | 1215ctns (486,000 pcs) |

Package Artworks


◇ **Box artwork**

MEAS: 22 x 9.5x 12 cm

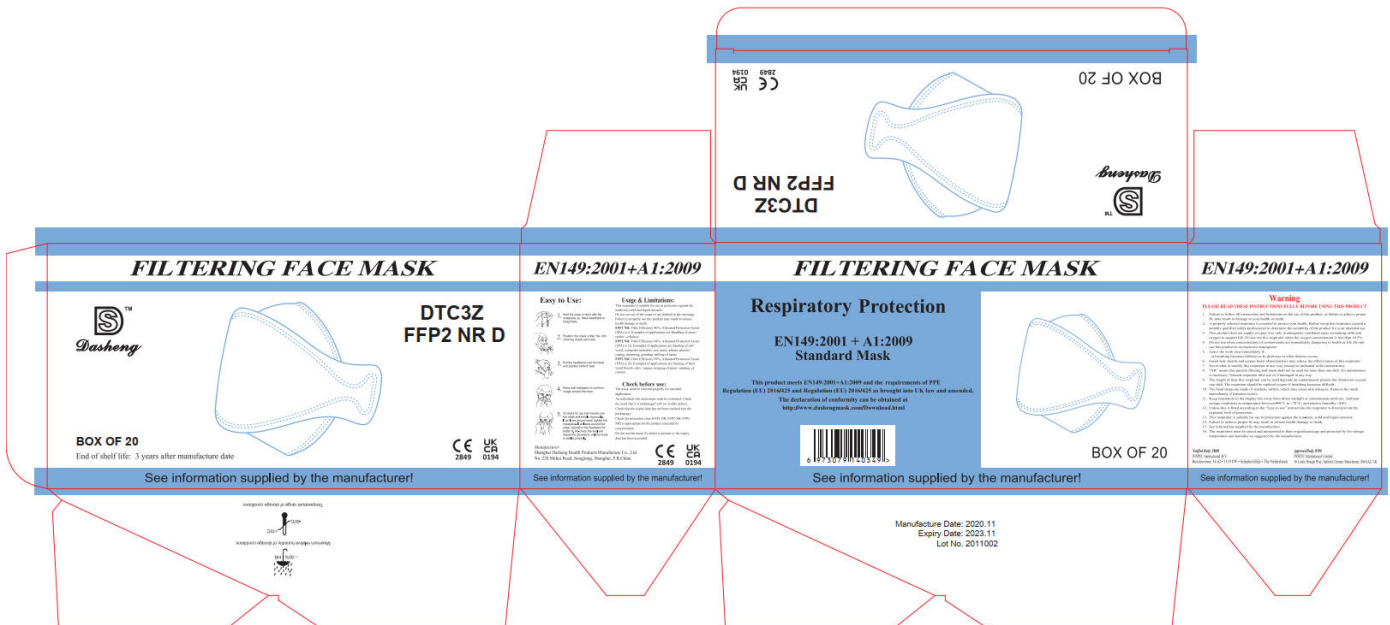

◇ **Carton artwork**

MEAS: 49.5x 46x 26 cm

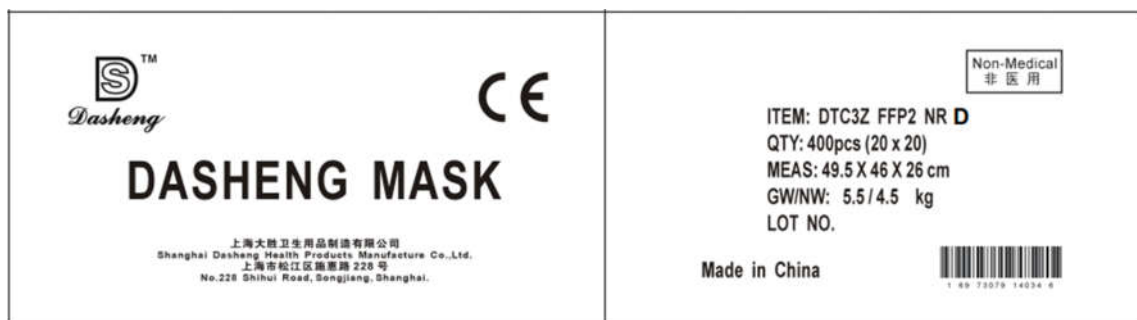



SHANGHAI DASHENGHEALTH
PRODUCTS MANUFACTURE CO LTD

Certificate of Conformity

- ◇ **Insert each box**
- ◇ **Shall update time to time without notice**

CERTIFICATE OF CONFORMITY

合格证

产品名称：口罩（非医用）
产品型号：DTC3Z FFP2 NR D
产品规格：215×85mm
主要成分：无纺布 70%、熔喷布 30%
执行标准：EN149:2001+A1:2009
过滤效率：≥94%
生产日期：见盒底
生产批号：见盒底
有效期：3年
检验员：01
生产企业：上海大胜卫生用品制造有限公司
生产地址：上海市松江区施惠路 228 号
电话：021-57783126 传真：021-57784148

Product Name: Non MedicalMask
Model No.: DTC3Z FFP2 NR D
Spec.: 215 × 85 mm
Main Material: Nonwoven, Meltblown
Executive Standard: EN149:2001+A1:2009

Filtering Efficiency: ≥94%
Manufacture Date: see the bottom of the box
Lot No.: see the bottom of the box
Expiration Date: 3 years
Inspector: Stamp of QC PASS / No.

Manufacturer: Shanghai Dasheng Health Products
Manufacture Co., Ltd.
Address: No. 228 Shihui Road, Songjiang, Shanghai
Tel: 021-57783126 **Fax:** 021-57784148

✧ User Manual

On each box

Easy to Use:



1. Hold the mask in hand with the nosepiece up. Allow headband to hang freely.



2. Position the mask under the chin covering mouth and nose.



3. Pull the headband over the head and position behind head



4. Press soft nosepiece to conform snugly around the nose.



5. To check fit, cup both hands over the mask and exhale vigorously. If air flows around nose, tighten the nosepiece. If air leaks around the edge, reposition the headband for better fit. Re-check the seal and repeat the procedure until the mask is sealed properly.

Usage & Limitations:

This respirator is suitable for use in protection against the non-toxic solid and liquid aerosols.

Do not use out of the scope of use defined in the warnings. Failure to properly use this product may result in serious health damage or death.

FFP1 NR: Filter Efficiency 80%; Allocated Protection Factor (FPA) is 4; Examples of applications are Handling of stone / rubble / cellulose.

FFP2 NR: Filter Efficiency 94%; Allocated Protection Factor (FPA) is 10, Examples of applications are Sanding of soft wood, composite materials, rust, putty, plaster, plastics / cutting, deburring, grinding, drilling of metal.

FFP3 NR: Filter Efficiency 99%; Allocated Protection Factor (FPA) is 20; Examples of applications are Sanding of hard wood (beech, oak) / treatment of wood using copper, chrome or arsenic based products / impact stripping of paint / sanding of cement.

Check before use:

The mask must be selected properly for intended application.

An individual risk assessment must be evaluated. Check the mask that it is undamaged with no visible defects.

Check that the expiry date has not been reached (see the packaging).

Check the protection class (FFP1 NR/ FFP2 NR/ FFP3 NR) is appropriate for the product used and its concentration.

Do not use the mask if a defect is present or the expiry date has been exceeded.